



Installation / User Manual

Models BPE600 & BPE1300
Photovoltaic Grid-connected Microinverter

Rev 1.3

Table of Contents

Important Safety Considerations	2
Safety Instructions	2
Radio Interference Statement.....	3
Communications Statement.....	3
Symbol Definitions.....	4
Microinverter System Introduction	5
Microinverter Introduction	7
Microinverter System Installation	8
Additional Installation Components	8
Required Parts and Tools.....	8
Installation Procedures.....	9
Step 1 – Install the AC Branch Circuit Junction Box.....	9
Step 2 – Attach the Microinverters to the Racking or the PV module frame.....	9
Step 3 – Connect the Microinverters in Parallel.....	10
Step 4 – Install an AC protective end cap at the end of the AC Cable.....	11
Step 5 – Connect Microinverters to the PV Modules.....	11
Microinverter System Operation	12
Troubleshooting	12
Status Indications and Error Reporting.....	13
Start up LED	14
Operation LED	14
GFDI Error.....	14
Other Errors.....	14
Troubleshooting an Inoperative Microinverter	14
Maintenance	14
Replacing a Microinverter	15
Technical Data	16
BPE600 Microinverter Datasheet	17
BPE1300 Microinverter Datasheet	18
Wiring Diagram	19
Sample Wiring Diagrams	19

Important Safety Instructions

This manual contains important instructions for the proper installation and maintenance of the Photovoltaic Grid-connected Inverter (Microinverter). To reduce the risk of electrical shock, and ensure safe installation and operation of the Microinverter, the following symbols appear throughout this document to indicate dangerous conditions and important safety considerations.

Specifications are subject to change without notice - please ensure you are using the most recent update found at the manufacturer website.

WARNING SYMBOL: Indicates a situation where failure to follow instructions appropriately may cause a serious hardware failure or personal injury. Use extreme caution when performing this task.



WARNING
SYMBOL

NOTE SYMBOL: Displays information that is important for optimized microinverter operation. Follow these instructions closely.



NOTE
SYMBOL

Safety Instructions

- ✓ **Do NOT** disconnect the PV module from the Microinverter without first disconnecting the AC power.
- ✓ Only qualified professionals should install and/or replace the Microinverters.
- ✓ Perform all electrical installations in accordance with local electrical codes.
- ✓ Before installing or using the Microinverter, please read all instructions and cautionary markings in the technical documents and on the Microinverter system and the solar-array.
- ✓ Be aware that the body of the Microinverter is a heat-sink, and can reach temperatures close to 80°C. To reduce risk of burns, do not touch the body of the Microinverter.
- ✓ **DO NOT** attempt to repair the Microinverter. If it fails, contact Customer Support to obtain an RMA number and start the replacement process. Damaging or opening the Microinverter will void the warranty.
- ✓ **Caution!**
The external protective grounding conductor is connected to the inverter grounding terminal through AC connector.
For connection: Connect the AC connector first to ensure inverter grounding, then perform the DC connections.
When disconnecting: First disconnect the AC connector by opening the branch circuit breaker, with the protective grounding conductor still connected. Disconnect the DC inputs afterwards.
- ✓ In any circumstance, do not connect DC input when the AC connector is unplugged.
- ✓ Please install isolation switching devices on the AC side of the inverter.

Important Safety Instructions

Radio Interference Statement

CE EMC Compliance: The equipment complies with CE EMC, which is designed to protect against harmful interference in residential installations. The equipment could emit radio frequencies which might cause harmful interference with radio communications, if the following installation instructions are not adhered to. There is no guarantee that interference will not occur in a particular installation. If this equipment causes hindering interference to radio or television reception, the following measures might resolve the issue:

- a) Relocate the receiving antenna, and keep it well away from the equipment.
- b) Consult the dealer or an experienced radio / TV technician for further assistance.

Changes or modifications not approved by the party responsible for compliance may void the user's authority to operate the equipment.

Communication Statement

The Energy Monitoring system and Analysis (EMA) software analyses and reports the performance of each module using real-time data, which is collected through the Data Monitoring Unit (DMU) gateway. The EMA promptly detects any performance issues in the array, pinpointing the location and nature of the problem and providing precise guidance for maintenance, all within a user-friendly graphic interface.

Communication between inverters and the DMU may be affected by signal "noise" from nearby electrical equipment, the distance between inverters and the DMU, the number of inverters supported, as well as other factors. If the DMU experiences a random loss of signal or data, an error or problem did not occur. If the DMU does not communicate with the EMA database at all, contact support.

Important Safety Instructions



Symbol Definitions

	Trademark.
	Caution, risk of electric shock.
	Caution, hot surface.
	Symbol indicating electrical and electronics device disposal according to Directive 2002/96/EC. Indicates that the device, accessories and the packaging must not be disposed as unsorted municipal waste. Waste electrical equipment should be collected and disposed separately. Please follow your local ordinances/regulations for disposal, or contact an authorized representative of the manufacturer for information concerning the decommissioning of equipment.
	The CE mark is attached to the solar inverter to verify that the unit follows the provisions of the European Low Voltage and EMC Directives.
	Refer to the operating instructions.
Qualified personnel	Person requires supervision by an adequately trained person, in order to avoid the risks and hazards associated with electricity. For the purposes of the safety information contained in this manual, "an adequately trained person" is someone who is familiar with requirements for safety, refrigeration system and EMC, and is authorized to energize, ground, and tag equipment, systems, and circuits in accordance with established safety procedures. The inverter and end user system may only be commissioned and operated by qualified personnel

Microinverter System Introduction

The microinverter is used in utility-interactive grid-tied applications, comprised of three key elements:

- Microinverter
- Data Monitoring Unit (DMU) & Radio Transmission Unit (RTU)
- Energy Monitor and Analysis (EMA) web-based monitoring and analysis system

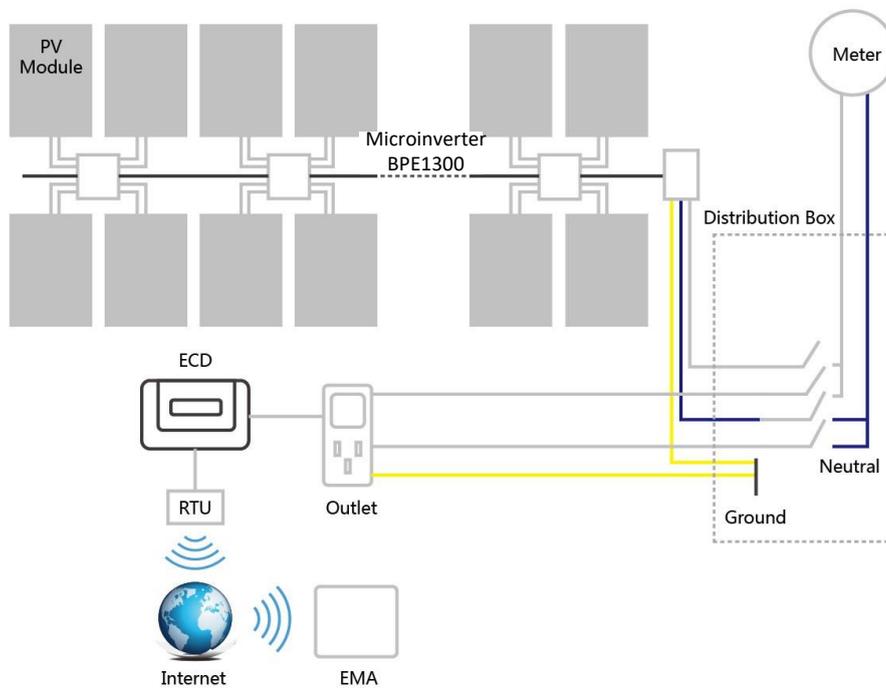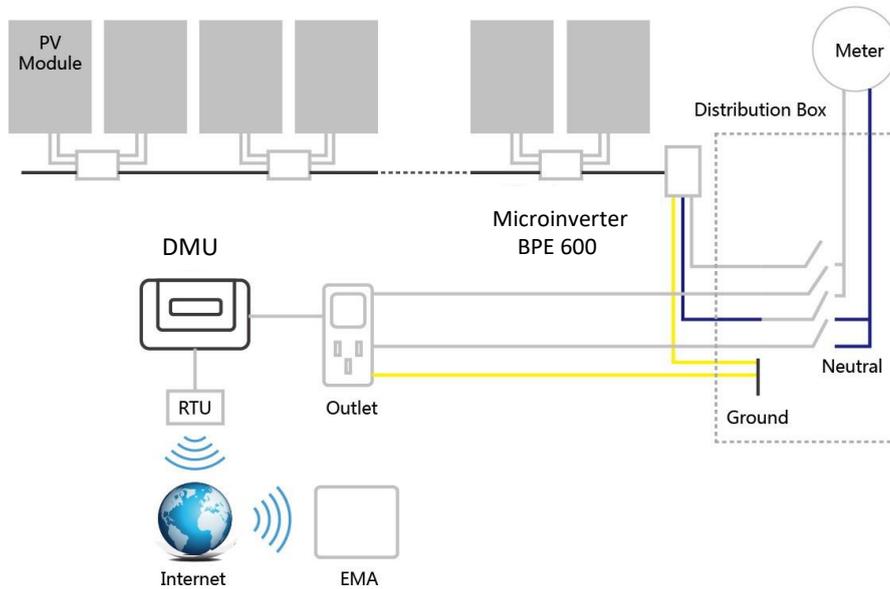

Microinverter System Introduction

This integrated system improves safety, maximizes solar energy harvest, and increases system reliability. It also simplifies solar system design, installation, maintenance, and management.

Microinverters maximize PV energy production

Each PV module has individual Maximum Peak Power Tracking (MPPT) controls, which ensures that the maximum power is transmitted to the utility grid regardless of the performance of the other PV modules in the array. When PV modules in the array are affected by shade, dust, orientation, or any situation in which one module under performs compared with the other units, the microinverter ensures peak performance from the array by maximizing the performance of each module.

More reliable than centralised or string inverters

The distributed microinverter system ensures that no single point of failure exists across the PV system. Microinverters are designed to operate at maximum power within ambient outdoor temperatures, including up to 149°F (65°C). The inverter housing is designed for outdoor installation and complies with the IP65 environmental enclosure rating.

Simple to install

Individual PV modules can be installed in any combination of Module quantity, orientation, different type and power rate. The ground wire (PE) of the AC cable is connected to the chassis inside the microinverter. This may potentially eliminate the installation of a grounding wire (check this with local regulation).

Smart system performance monitoring and analysis

The Data Monitoring Unit (DMU) is installed by simply plugging it into any wall outlet, and providing an Ethernet connection to a broadband router or modem. After installing and setting-up the DMU (see DMU manual), the full network of microinverters automatically reports to the Energy Monitor and Analysis (EMA) web server. The EMA software displays performance trends, alerts the user to abnormal events, and controls system shutdown when required (See DMU manual for instructions.)

Microinverter Introduction

The microinverters connect with the single-phase grid. A three-phase grid can also be achieved through the use of multiple microinverters, which operates with most 60 and 72 cell PV modules. For more information, please see the Technical Data page (p.18) of this manual.

Model	AC grid	PV Module	Max. # Per branch	Module Connector
BPE600	50/60Hz,127/240V	60, 72 Cell	8 for 25A breaker	MC-4 Type or Customize
BPE1300	50/60Hz,240V	60, 72 Cell	4 for 25A breaker	MC-4 Type or Customize

Microinverter System Introduction

Setting up microinverters for a PV system is simple. Each microinverter easily mounts on the PV racking, directly beneath the PV module(s). Low voltage DC wires connect from the PV module directly to the microinverter, eliminating the risks associated with high DC voltage. Installation **MUST** comply with local regulations and technical rules.

Special Statement! *An AC GFCI device **should not** be used to protect the dedicated circuit to the microinverter, even though it is an outside circuit. None of the small GFCI devices (5mA-30 mA) are designed for back feeding, and will be damaged. In a similar manner, AC AFCIs have not been evaluated for back feeding and may be damaged if back feed with the output of a PV inverter.*

WARNING: Perform all electrical installations in accordance with local electrical codes.

WARNING: Be aware that only qualified professionals should install and/or replace microinverters.

WARNING: Before installing or using a microinverter, please read all instructions and warnings in the technical documents, on the microinverter system itself, as well as on the PV array.

WARNING: Be aware that installation of this equipment includes the risk of electric shock.

WARNING: Do not touch any live parts in the system, including the PV array while the system is connected to the electrical grid.

NOTE: It is strongly recommend to install surge protection devices in the dedicated meter box.



Additional Installation components

- AC male and female connectors (sold separately)
- Sealing end caps (sold separately)


Required Parts and Tools

In addition to your PV array and its associated hardware, the following items are required:

- An AC connection junction box
- Mounting hardware suitable for module racking
- Sockets and wrenches for mounting hardware
- Continuous grounding conductor and washers
- A cross head screwdriver
- A torque wrench

Installation Procedures

Step 1 - Install the AC branch circuit junction box

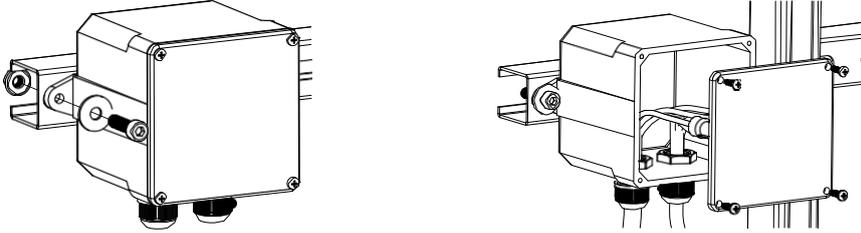


- Install an appropriate junction box at a suitable location on the PV racking system (typically at the end of a branch of modules).
- Connect the open wire end of the AC cable into the junction box using an appropriate gland or strain relief fitting.
- Wire the conductors of the AC: L - RED; N - BLACK ; PE - YELLOW GREEN.
- Connect the AC branch circuit junction box to the point of utility interconnection.

WARNING: The wiring colour code can be different according local regulation. Check that all of the installed wire colours match regulation before connecting the AC cable. Wrong cabling can irreparably damage the microinverters. This error is not covered by the warranty.




Step 2 - Attach the Microinverters to the racking or the PV module frame

- Mark the location of the microinverter on the rack, with respect to the PV module junction box, or any other obstructions.
- Mount one microinverter at each of these locations, using the hardware recommended by your module racking vendor.

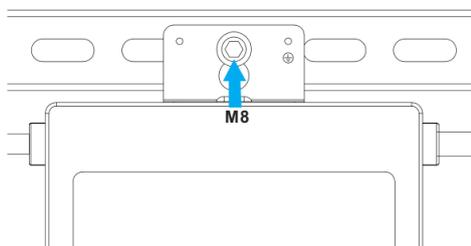

600W Mounting

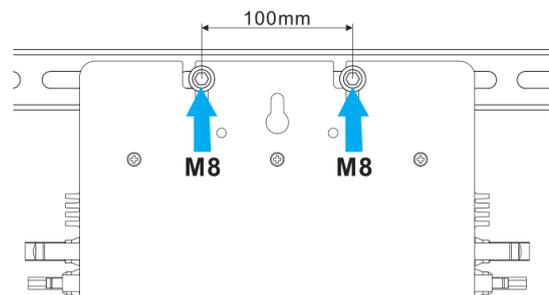

1300W Mounting

Installation Procedures

WARNING: Prior to installing any of the microinverters, verify that the utility voltage at the point of common connection matches the voltage rating on the microinverter label.



WARNING: Do not place the inverters (including DC and AC connectors) where they can be exposed to the sun, rain or snow. Allow a minimum of 3/4" (1.5 cm.) between the roof and the bottom of the microinverter to allow proper air flow.



Step 3 - Connect the microinverters in parallel





600w connect in parallel



1300w connect in parallel

- Check the microinverter technical data page (p.18) for the maximum allowable number of microinverters on each AC branch circuit.
- Plug the male AC connector of the microinverter into the female counterpart.

AC connector interface as follows.

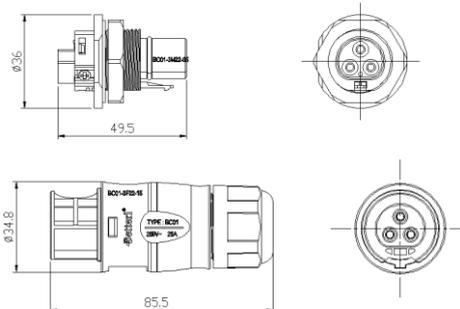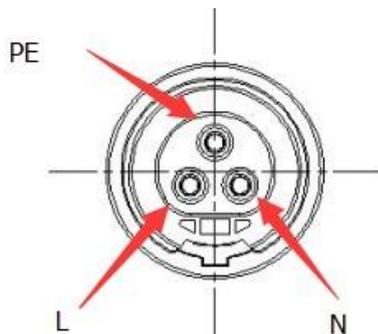


WARNING: Do NOT exceed maximum number of microinverters in an AC branch circuit, as displayed on the page 7 of this manual.





Installation Procedures

Step 4 - Install a AC cable protective end cap at the end of AC cable

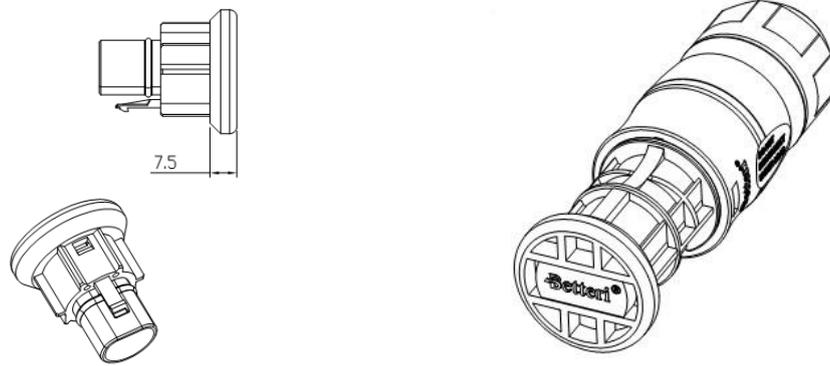

Step 5 - Connect Microinverters to the PV Modules

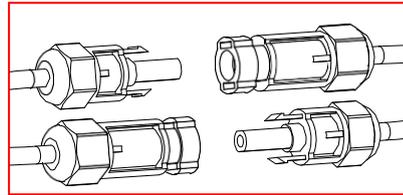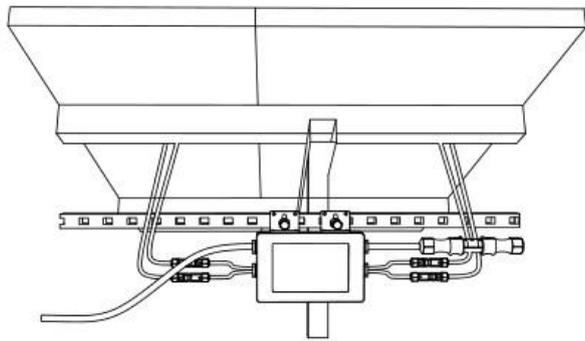

NOTE: When the DC cables are plugging in, the microinverter LED should immediately blink red once, followed by three short green blinks. This will happen as soon as the cables are plugged in, indicating that the microinverter is functioning correctly. This entire function will occur within 5 seconds of plugging in the unit, so pay careful attention to the LED when connecting the DC cables.



WARNING: Double-check to make sure all of the AC and DC wiring has been correctly installed. Ensure that none of the AC and/or DC wires are pinched or damaged. Make sure that all of the junction boxes are properly closed.



Microinverter system operating instructions

Microinverter PV System Operation:

1. Turn ON the AC circuit breaker on each microinverter AC branch circuit.
2. Turn ON the main utility-grid AC circuit breaker. Your system will start producing power after a one-minute waiting time.
3. The unit LEDs should start blinking red, one minute after turning on the AC circuit breaker. The LED should then blink blue. This indicates that the units are functioning normally, the faster the LED blinks blue, the more power is generated.
4. Plug in the DMU and follow the instructions according to its manual.
5. The microinverters will send performance data through the power line to the DMU. The time required for all the microinverters in the system to report to the DMU will vary on the number of microinverters in the system. You can verify proper operation of the microinverters via the DMU. See the DMU Installation and Operation Manual for more information.

NOTE: Once AC power is supplied, about 0.1A current and 25VA(W) power for each microinverter may be measured with a meter. The current and power are reactive. The inverters ARE NOT operating. After an over 60s waiting time, the inverters will start operation.



Troubleshooting

Qualified personnel should use the following troubleshooting steps if the PV system is inoperative:

Status Indications and Error Reporting

Start up LED

One minute after DC power is first applied to the microinverter, one short red blink indicates a successful microinverter startup sequence. If two or more short red blinks occur after DC power is first applied to the microinverter, a failure during microinverter setup has occurred.

Operation LED

- **Flashing Slow Blue** - a small amount of power is produced.
- **Flashing Fast Blue** - large amounts of power are produced.
- **Flashing Red** - Not producing power
- **Red blinking twice** - AC low-voltage or high-voltage
- **Red blinking three times** - Grid malfunction

GFDI Error

If the LED blinks four times, it indicates that the Microinverter has detected a Ground Fault Detector Interrupter (GFDI) error in the PV system. Unless the GFDI error has been cleared, the LED will continue to blink 4 times in sequence.

Other Errors

All other errors are reported to the DMU. Refer to the DMU Installation and Operation Manual for a list of additional errors and troubleshooting procedures.

WARNING: Only qualified personnel should directly handle the microinverter.



WARNING: Never disconnect the DC wire connectors under load. Ensure that no current is flowing in the DC wires prior to disconnection. An opaque covering may be used to protect the module prior to disconnecting the module.



WARNING: Always disconnect the AC power before disconnecting the PV module wires from the microinverter. Either disconnect through the appropriate AC circuit breaker, or unplugging the AC connector to the first microinverter of a branch circuit. Both are suitable as a means of disconnection.



WARNING: The microinverter is powered by the PV module DC power. AFTER disconnecting the DC power, when reconnecting the PV modules to the microinverter, pay attention for the three short LED flashes.



Troubleshooting

Troubleshooting an Inoperative Microinverter

There are two malfunction possibilities:

- a) The microinverter itself may be experiencing problems.
- b) The microinverter is working, but it is having trouble communicating with the DMU. The items below refer to microinverter issues, which exclude communication issues (addressed in the DMU installation and user manual).

Quick ways to tell whether the issue is inside the microinverter or a communication problem with the DMU include:

1. **Diagnosing the Microinverter:** A red LED light – either blinking or solid, or no light at all. No light, or red light indicates a malfunction within the microinverter.
2. **Diagnosing from the DMU:**
 - **No-Data-Display:** This is probably a communication issue- not a microinverter problem.
 - **Problems with erratic display:** Data is displayed for random periods of time: most likely a communication issue.
 - **0 W, or 2 W:** Possibly a microinverter problem
 - **Erratic data display:** Poor coordination with data displays from other units indicates a likely a microinverter malfunction.

To troubleshoot an inoperative microinverter, follow the instructions below:

1. Verify that the utility AC voltage and frequency are within the ranges indicated in the Technical Data section of this manual.
2. Check the connection to the utility grid. Verify utility power is present at the inverter in question by removing AC, then DC power. **Never disconnect the DC wires while the microinverter is transmitting power.** Re-connect the DC module connectors and watch for three short LED flashes.
3. Check the AC branch circuit interconnection between all the microinverters. Verify each inverter is energized by the utility grid as described in the previous step.
4. Make sure that the AC breakers are functioning properly and are closed.
5. Check the DC connections between the microinverter and the PV module.
6. Verify that the PV module DC voltage is within the allowable range indicated in the Technical Data of this manual.
7. If the problem persists, please call Customer Support.

WARNING: Do not attempt to repair the microinverter. If troubleshooting methods fail, please call for Technical Support



Maintenance

Maintenance is not required.

Replace a Microinverter

Follow the procedure to replace a failed microinverter:

- a) Disconnect the microinverter from the PV module, in the order shown below:
 - i) Disconnect the AC by turning off the branch circuit breaker.
 - ii) Disconnect the AC connector of the microinverter.
 - iii) Cover the module with an opaque casing.
 - iv) Disconnect the PV module DC wire connectors from the microinverter.
 - v) Remove the microinverter from the PV array racking.

- b) Remove the opaque cover, then install a replacement microinverter to the rack. Remember to consider the flashing LED light as soon as the new microinverter is plugged into the DC cables.

- c) Connect the AC cable of the replacement microinverter.

- d) Close the branch circuit breaker, and verify proper operation of the replacement microinverter.

Technical Data

WARNING: Be sure to verify that the voltage and current specifications of your PV module match with those of the Microinverter. Please refer to the datasheet or user manual.



WARNING: You must match the DC operating voltage range of the PV module with the allowable input voltage range of the Microinverter.



WARNING: The maximum open circuit voltage of the PV module must not exceed the specified maximum input voltage of the inverter.



BPE600 Microinverter Datasheet

Model

BPE600-127V

BPE600-240V

Input Data (DC)

MPPT Voltage Range	25V-55V
Operation Voltage Range	20V-55V
Maximum Input Voltage	60V
Startup Voltage	20V
Maximum Input Current	10.4A x 2
Maximum DC Short Circuit Current	13A

Output Data (AC)

Maximum Output Power	600W	
Nominal Output Voltage	127/240V	
Nominal Output Current	2.5A/4A	
Default/Protect Output Voltage Range	95-155V	184-265V
Extended/Reconnect Output Voltage Range	95-155V	184-265V
Nominal Output Frequency	50Hz/60Hz Auto Sense	
Default/Protect Output Frequency Range	50Hz/45-55,60Hz/59.3-60.5	
Extended/Reconnect Output Frequency Range	50Hz/45-55,60Hz/59.3-60.5	
Power Factor	>0.99	
Total Harmonic Distortion	<3%	
Max. Inverter Efficiency	96.5%	
Night Power Consumption	50mW	
Operating Ambient Temperature Range	-40 °C to +65 °C	
Storage Temperature Range	-40 °C to +85 °C	
Dimensions (W x H x D)	187mm X 163mm X 29mm	
Weight	2.2kg	
Communication	Powerline	
Enclosure Rating	IP65	
Cooling	Natural Convection - No Fans	
Wet Locations Classification	For Wet Locations	
Pollution Degree Classification	PD3	
Relative Humidity Ratings	0-95%	
Maximum Altitude Rating	All Data At This Technical Specifications Has Been Tested Under <2000m	
Certificates	UL1741,VDE0126,VDE4105,IEC62109,CE	

© All Rights Reserved

BPE1300 Microinverter Datasheet

Model BPE1300-240V

Input Data (DC)

MPPT Voltage Range	25V-55V
Operation Voltage Range	20V-55V
Maximum Input Voltage	60V
Startup Voltage	20V
Maximum Input Current	10.4A x4
Maximum DC Short Circuit Current	13A

Output Data (AC)

Maximum Output Power	1300W
Nominal Output Voltage	240V
Nominal Output Current	5.416A
Default/Protect Output Voltage Range	184-265V
Extended/Reconnect Output Voltage Range	184-265V
Nominal Output Frequency	50Hz/60Hz Auto Sense
Default/Protect Output Frequency Range	50Hz/45-55,60Hz/59.3-60.5
Extended/Reconnect Output Frequency Range	50Hz/45-55,60Hz/59.3-60.5
Power Factor	>0.99
Total Harmonic Distortion	<3%

Efficiency

Max. Inverter Efficiency	96.5%
Night Power Consumption	50mW

Mechanical Data


Operating Ambient Temperature Range	-40 °C to +65 °C
Storage Temperature Range	-40 °C to +85 °C
Dimensions (W x H x D)	450mm X 455mm X 35mm
Weight	6.5kg
Communication	Powerline
Enclosure Rating	IP65
Cooling	Natural Convection - No Fans
Wet Locations Classification	For Wet Locations
Pollution Degree Classification	PD3
Relative Humidity Ratings	0-95%
Maximum Altitude Rating	All Data At This Technical Specifications Has Been Tested Under <2000m
Certificates	UL1741,VDE0126,VDE4105,IEC62109,CE

© All Rights Reserved

Wiring Diagram


Sample Wiring Diagram Three Phase

Sample Wiring Diagram BPE600

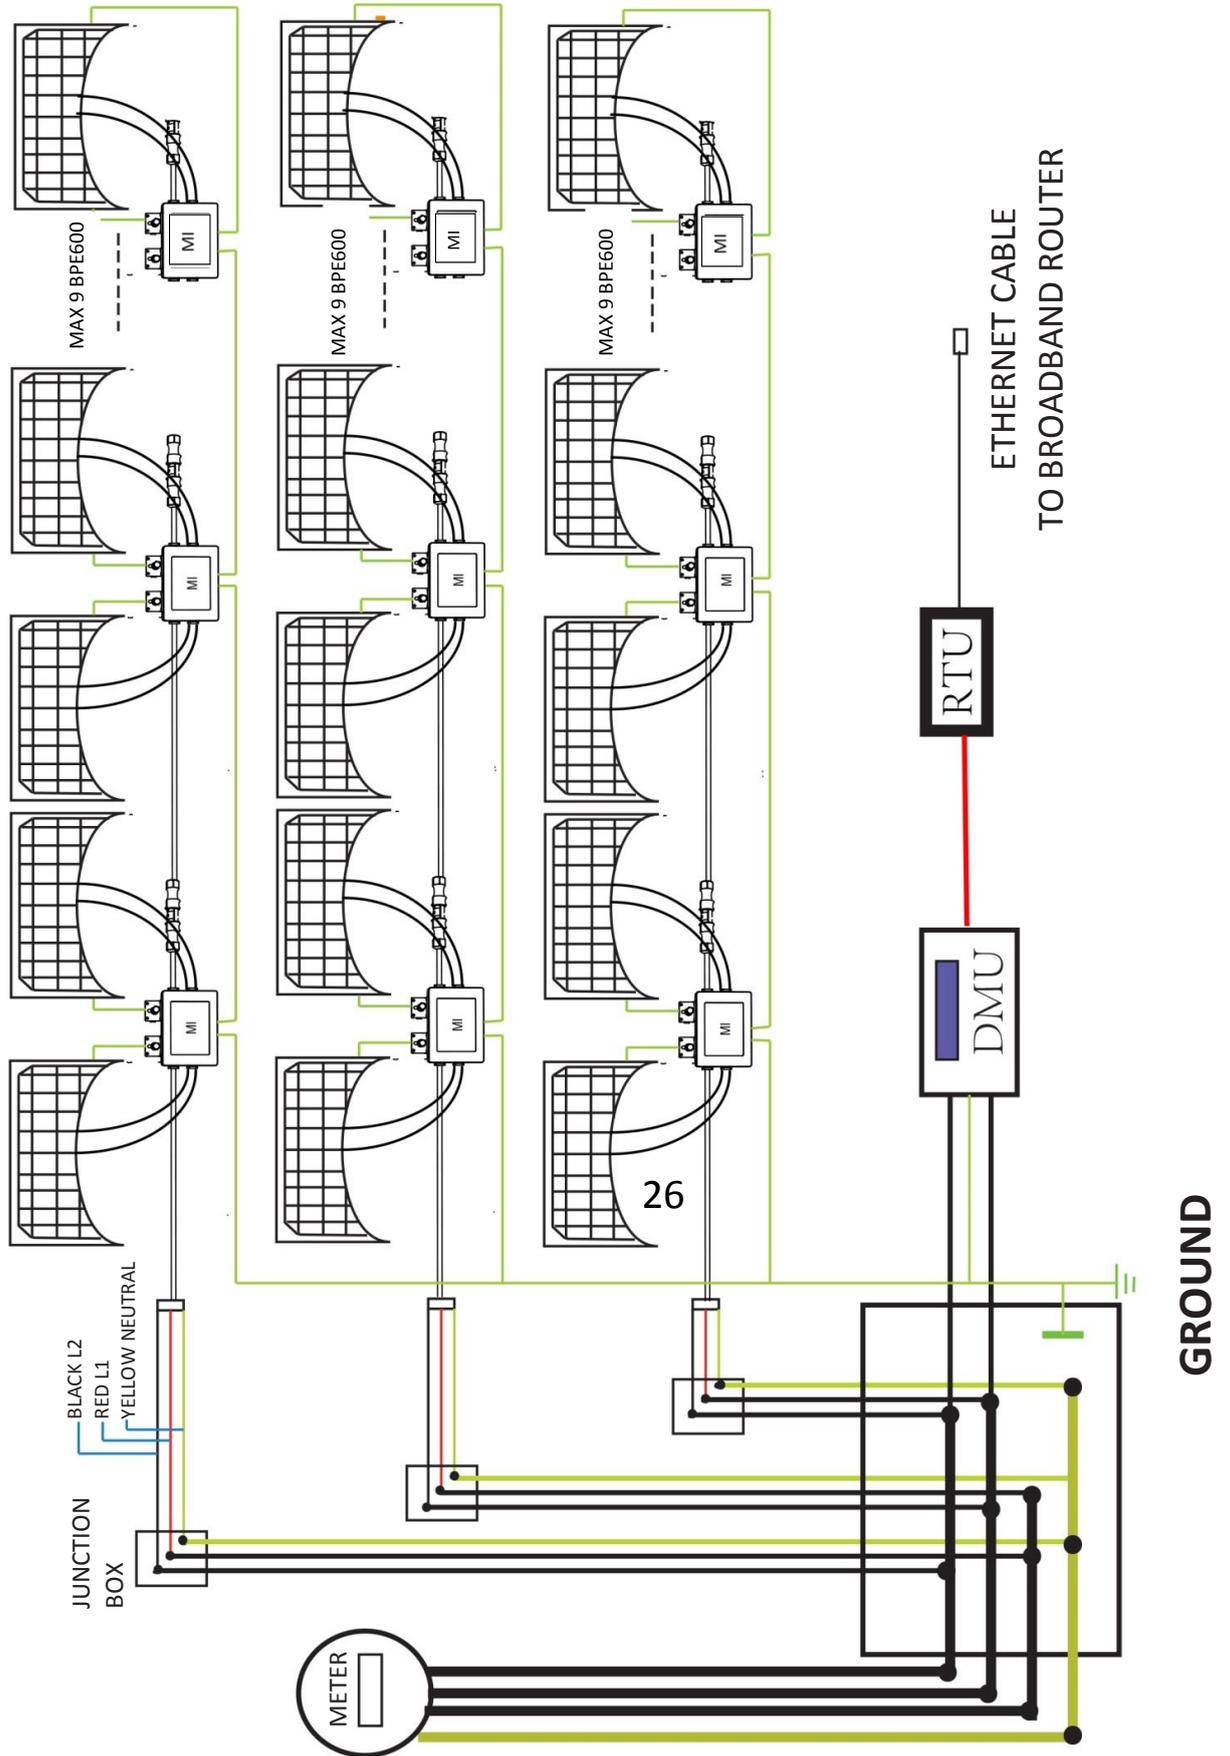


Sample Wiring Diagram Single Phase

Sample Wiring Diagram BPE600

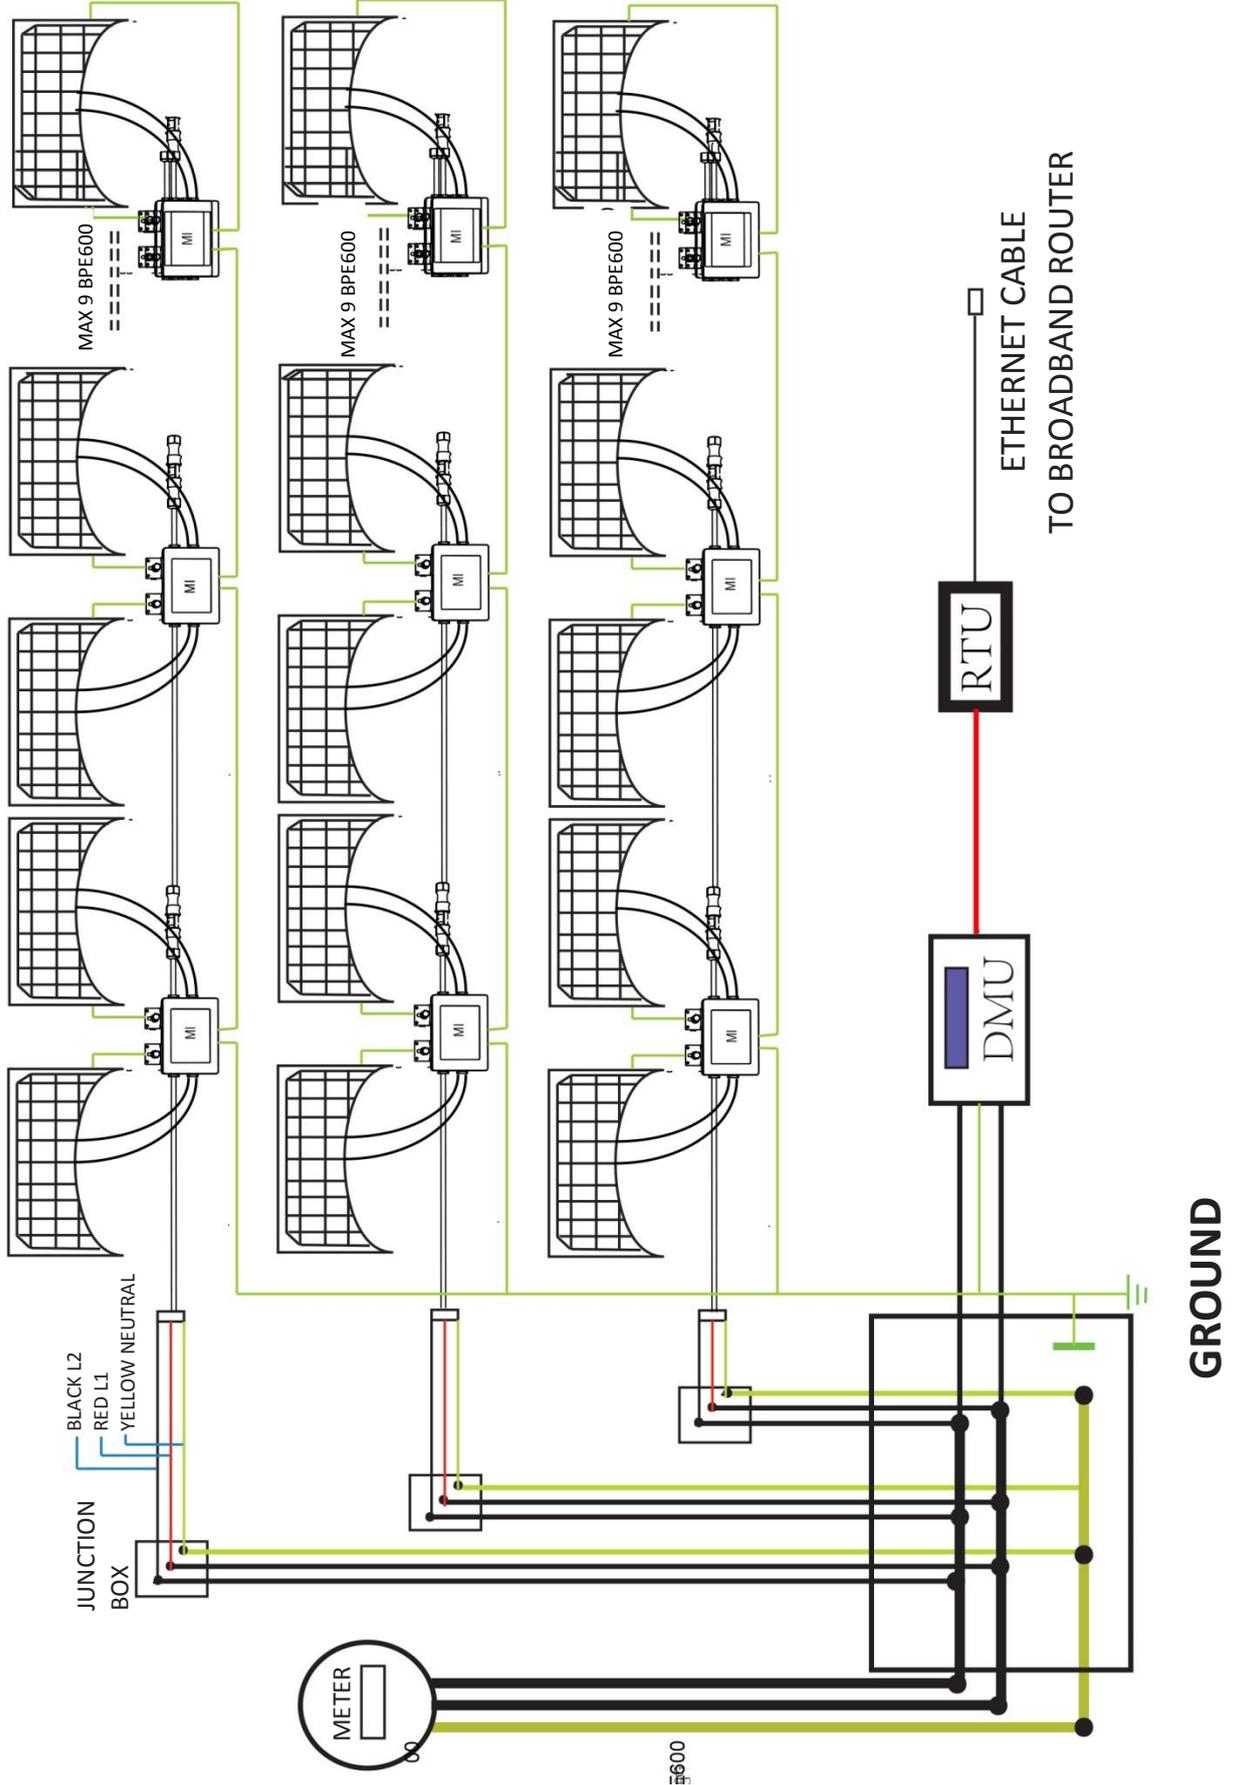

Sample Wiring Diagram Three Phase

Sample Wiring Diagram BPE1300

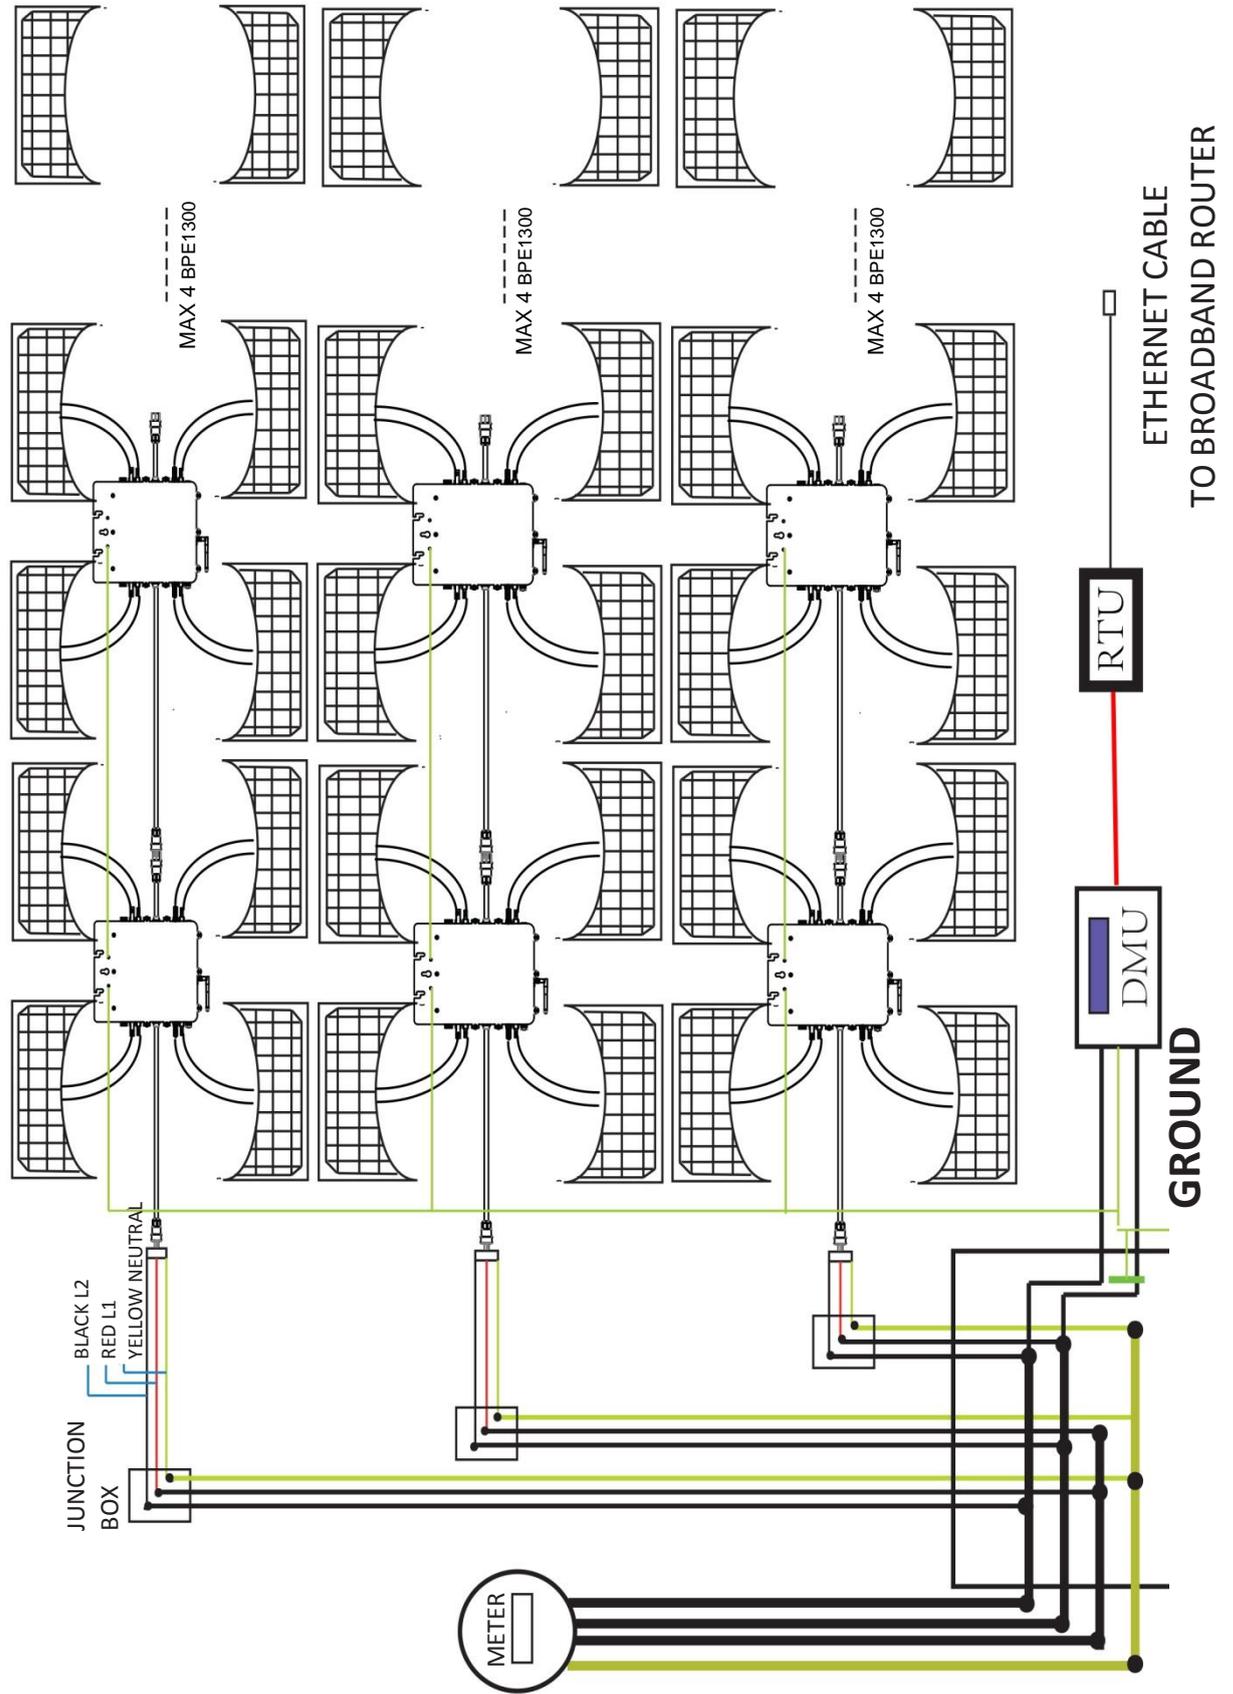

Sample Wiring Diagram Single Phase

Sample Wiring Diagram BPE1300

